

WESTFIELD®

GRAIN AUGERS

W130 - 51'/61'/71' PTO-SD
ASSEMBLY & OPERATION MANUAL



Read this manual before using product. Failure to follow instructions and safety precautions can result in serious injury, death, or property damage. Keep manual for future reference.

Part Number: 30262 R0

Revised: Jan/10

TABLE OF CONTENTS

1. Introduction	5
2. Safety First.....	7
2.1. General Safety	8
2.2. Assembly Safety.....	9
2.3. Transport and Placement Safety	9
2.4. PTO Safety	10
2.5. Hydraulic Safety	10
2.6. Operational Safety.....	10
2.7. Maintenance Safety.....	12
2.8. Safety Decal Locations.....	12
2.8.1. Decal Installation	12
2.8.2. Decal Locations	12
3. Assembly	15
3.1. Tubes & Flighting	15
3.2. Track Shoe and Track Stop.....	16
3.3. Intake Hitch	18
3.4. Multi-Stage Driveshaft	18
3.5. Shaft Drive Gearbox.....	19
3.6. Driveshaft Shield	20
3.7. Discharge Spout.....	21
3.8. Truss	21
3.9. Transport Undercarriage	24
3.10. Lift Cylinders & Cable.....	27
3.11. Hydraulic Hose Attachment.....	29
3.12. PTO Driveline	30
3.13. Upper Housing Lubrication.....	30
3.14. Plastic Manual Holder	30
4. Transport & Placement	31
4.1. Transport Procedure	31
4.2. Placement Procedure.....	32
5. Operation	35
5.1. Pre-Operation Checklist	35
5.2. Auger Drive & Lockout Procedure.....	35
5.3. Operating Procedure	36
5.3.1. Start-Up and Break In.....	36
5.3.2. Operating with a Full Load.....	36
5.3.3. Shutdown.....	37
5.3.4. Lowering & Completion	38
6. Maintenance & Storage.....	39
6.1. General Maintenance Procedures.....	39
6.2. General Storage Procedures.....	40

TABLE OF CONTENTS

7. Troubleshooting	41
Warranty	43

1. Introduction

Congratulations. As the new owner of a grain auger, you will be working with equipment designed to complement and improve your farming operation. Before using this auger, please read this manual and all safety labels and familiarize yourself with the various features of the machine and the necessary precautions for efficient and safe operation.

In addition, anyone using this auger is required to comply with all safety precautions in this manual and in safety labels attached to the auger. A sign-off form is supplied on the inside front cover to record your safety reviews.

Thank you.



Serial Number:	
Serial number is found on the right at the top of the lower tube.	

2. Safety First



The Safety Alert symbol to the left identifies important safety messages on the product and in the manual. When you see this symbol, be alert to the possibility of personal injury or death. Follow the instructions in the safety messages. Why is SAFETY important to you?

Three big reasons:

- Accidents disable and kill.
- Accidents cost.
- Accidents can be avoided.

SIGNAL WORDS

Note the use of the signal words **DANGER**, **WARNING**, **CAUTION**, and **NOTICE** with the safety messages. The appropriate signal word for each message has been selected using the definitions below as a guideline.

The Safety Alert symbol means ATTENTION, BE ALERT!, YOUR SAFETY IS INVOLVED.

DANGER



Indicates an imminently hazardous situation that, if not avoided, will result in serious injury or death.

WARNING



Indicates a hazardous situation that, if not avoided, could result in serious injury or death.

CAUTION



Indicates a hazardous situation that, if not avoided, may result in minor or moderate injury.

NOTICE

Indicates a potentially hazardous situation that, if not avoided, may result in property damage.

2.1. GENERAL SAFETY

Important: *The general safety section includes instructions that apply to all safety practices. Any instructions specific to a certain safety practice (e.g., assembly safety), can be found in the appropriate section. Always read the complete instructional sections and not just these safety summaries before doing anything with the equipment.*

YOU are responsible for the **SAFE** use and maintenance of your equipment. **YOU** must ensure that you and anyone else who is going to work around the equipment understands all procedures and related **SAFETY** information contained in this manual.

Remember, **YOU** are the key to safety. Good safety practices not only protect you, but also the people around you. Make these practices a working part of your safety program.

- It is the equipment owner and the operator's responsibility to read and understand **ALL** safety instructions, safety decals, and manuals and follow them before assembling, operating, or maintaining the equipment. All accidents can be avoided.
- Equipment owners must give instructions and review the information initially and annually with all personnel before allowing them to operate this product. Untrained users/operators expose themselves and bystanders to possible serious injury or death.
- Use this equipment for its intended purposes only.
- Do not modify the equipment in any way. Unauthorized modification may impair the function and/or safety, and could affect the life of the equipment. Any modification to the equipment voids the warranty.
- Do not allow children, spectators, or bystanders within the work area.
- Have a first-aid kit available for use should the need arise, and know how to use it.
- Provide a fire extinguisher for use in case of an accident. Store in a highly visible place.
- Wear appropriate protective gear. This list includes, but is not limited to:
 - a hard hat
 - gloves
 - protective shoes with slip-resistant soles
 - protective goggles
 - hearing protection
- For Powered Equipment: before servicing, adjusting, or repairing powered equipment, unplug, place all controls in neutral or off position, stop the engine or motor, remove ignition key or lock out power source, and wait for all moving parts to stop.



- Follow good shop practices:
 - keep service area clean and dry
 - be sure electrical outlets and tools are properly grounded
 - use adequate light for the job at hand
 - Think SAFETY! Work SAFELY!




2.2. ASSEMBLY SAFETY

- Read through the instructions to get to know the sub-assemblies and hardware that make up the equipment.
- Do not take chances with safety. The components are large, heavy, and can be hard to handle. Always use the proper tools, stands, jacks, and hoists for the job.
- Always have 2 or more people assembling the equipment. Because of the weight, do not attempt assembly alone.

2.3. TRANSPORT AND PLACEMENT SAFETY

- Transport auger in full down position with slight tension on cable.
- Properly place hitch pin and securely attach safety chain. Use a type of hitch pin that will not allow auger to separate from towing vehicle.
- Always attach an SMV (slow moving vehicle) sign before transporting auger. Equip the auger with the necessary lights for transportation where required by law. Always use hazard warning flashers on the tractor/towing vehicle when transporting unless prohibited by law.
- Always travel at a safe speed, never exceeding 15 mph (24 km/hr). Reduce speed on rough surfaces and be cautious when turning corners or meeting traffic.
- Before raising/lowering/moving the auger, make sure the area around the auger is clear of obstructions and/or untrained personnel. Never allow anyone to stand on or beneath auger while transporting or placing auger.
- Do not transport auger on slopes greater than 20°.
- Wheels must be free to move when raising or lowering auger.
- Never attempt to move auger manually. To do so will result in serious injury.

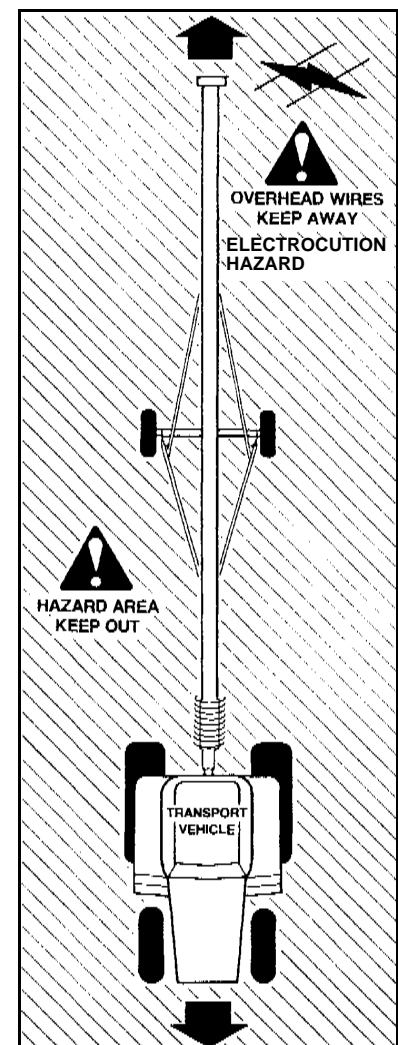

- Before moving auger, check for overhead obstructions and/or electrical wires. Electrocution can occur without direct contact.
- Disconnect PTO driveline from tractor before moving auger or tractor and secure in transport saddle (where applicable).

2.4. PTO SAFETY

- Never use a PTO driveline without a rotating guard in good working order.
- Ensure PTO driveline is securely attached at both ends.
- Before starting tractor, turn power to PTO to the off position (where applicable).
- Keep body, hair, and clothing away from rotating PTO driveline.
- Ensure the driveline shields turn freely on driveline.
- Do not exceed operating speed of 540 rpm.
- Keep u-joint angles small and equal. Do not exceed recommended operating length for PTO driveline.

2.5. HYDRAULIC SAFETY

- Wear proper hand and face protection when searching for hydraulic leaks. Escaping fluid under pressure can penetrate the skin, causing serious injury like gangrene. In case of accident, see a doctor immediately.
- Fluid leaks in the hydraulic lift cylinders or hoses will allow the auger to lower inadvertently. Repair all leaks and breaks immediately. Rupture could cause damage and/or personal injury.
- A hydraulic lift is faster than a conventional hand crank—always clear area of personnel before raising or lowering.
- Do not disconnect hydraulic couplers when hydraulic system is pressurized. For the correct procedure, consult this manual or your tractor manual.
- Relieve pressure before unhooking hydraulic lines.
- Inspect hydraulic fittings and hoses for damage on a daily basis. Repair if damaged.
- Ensure that the hydraulic line is properly connected and secure.
- Keep hydraulic line away from moving parts.
- Clean connections before connecting to equipment.

2.6. OPERATIONAL SAFETY

- Have another trained person nearby who can shut down the auger in case of accident. Always work with a second trained person around augers.
- Do not operate with any of the safety guards removed.
- Keep body, hair, and clothing away from moving parts. Stay away from intake during operation.

- Inspect lift cable before using auger. Replace if frayed or damaged. Make sure it is seated properly in the cable sheaves and that cable clamps are secure.
- Operate auger on level ground free of debris. If ground is uneven, anchor the auger to prevent tipping or upending.
- Augers are not insulated. Keep away from electrical lines. Electrocutation can occur without direct contact.
- Support the discharge end and/or anchor the intake end before operating to prevent upending.
- Do not use auger as a hoist.
- Empty auger before raising or lowering.
- Lower auger at completion of operation or when not in use. Auger could drop rapidly in case of cable break or hydraulic failure (where applicable).

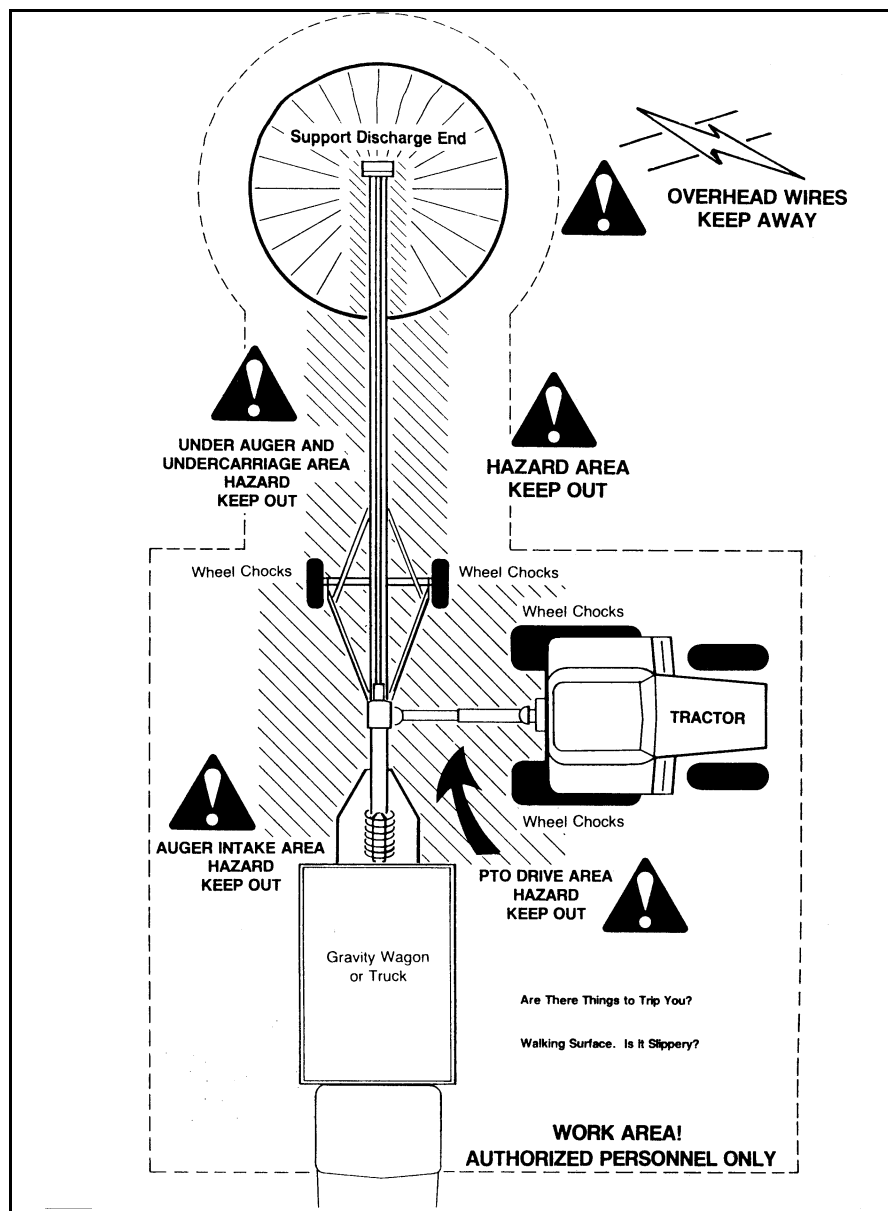


Figure 2.1

2.7. MAINTENANCE SAFETY

- Shut down and lock out all power before attempting maintenance of any kind. **If applicable**, disconnect PTO driveline from tractor or hydraulic hoses on units with hydraulic drive hoppers.
- After maintenance is complete, replace and secure all safety guards and safety devices, and if applicable, service doors and cleanout covers.
- Support auger tube before attempting maintenance on the undercarriage assembly. Auger should be in full down position for maintenance.
- Use only genuine Westfield replacement parts or equivalent. Replacement parts such as intake guards, pulley guards, PTO driveline shields, winches, and lift cables must meet ASABE standards or serious injury may result. Use of unauthorized parts will void warranty. If in doubt, contact Westfield or your Westfield dealer.
- Do not modify any auger components without authorization from Westfield. Modification can be dangerous and result in serious injuries.

2.8. SAFETY DECAL LOCATIONS

- Keep safety decals clean and legible at all times.
- Replace safety decals that are missing or have become illegible. See decal location figures below.
- Replaced parts must display the same decal(s) as the original part.
- Safety decals are available from your distributor, dealer, or factory.

2.8.1. DECAL INSTALLATION

1. Decal area must be clean and dry, with a temperature above 10°C (50°F).
2. Decide on the exact position before you remove the backing paper.
3. Align the decal over the specified area and carefully press the small portion with the exposed sticky backing in place.
4. Slowly peel back the remaining paper and carefully smooth the remaining portion of the decal in place.
5. Small air pockets can be pierced with a pin and smoothed out using the sign backing paper.

2.8.2. DECAL LOCATIONS

Replicas of the safety decals that are attached to the equipment are shown below. Good safety requires that you familiarize yourself with the various safety decals and the areas or particular functions that the decals apply to as well as the safety precautions that must be taken to avoid serious, injury, death, or damage.

** Westfield reserves the right to update safety decals without notice. Safety decals may not be exactly as shown.*

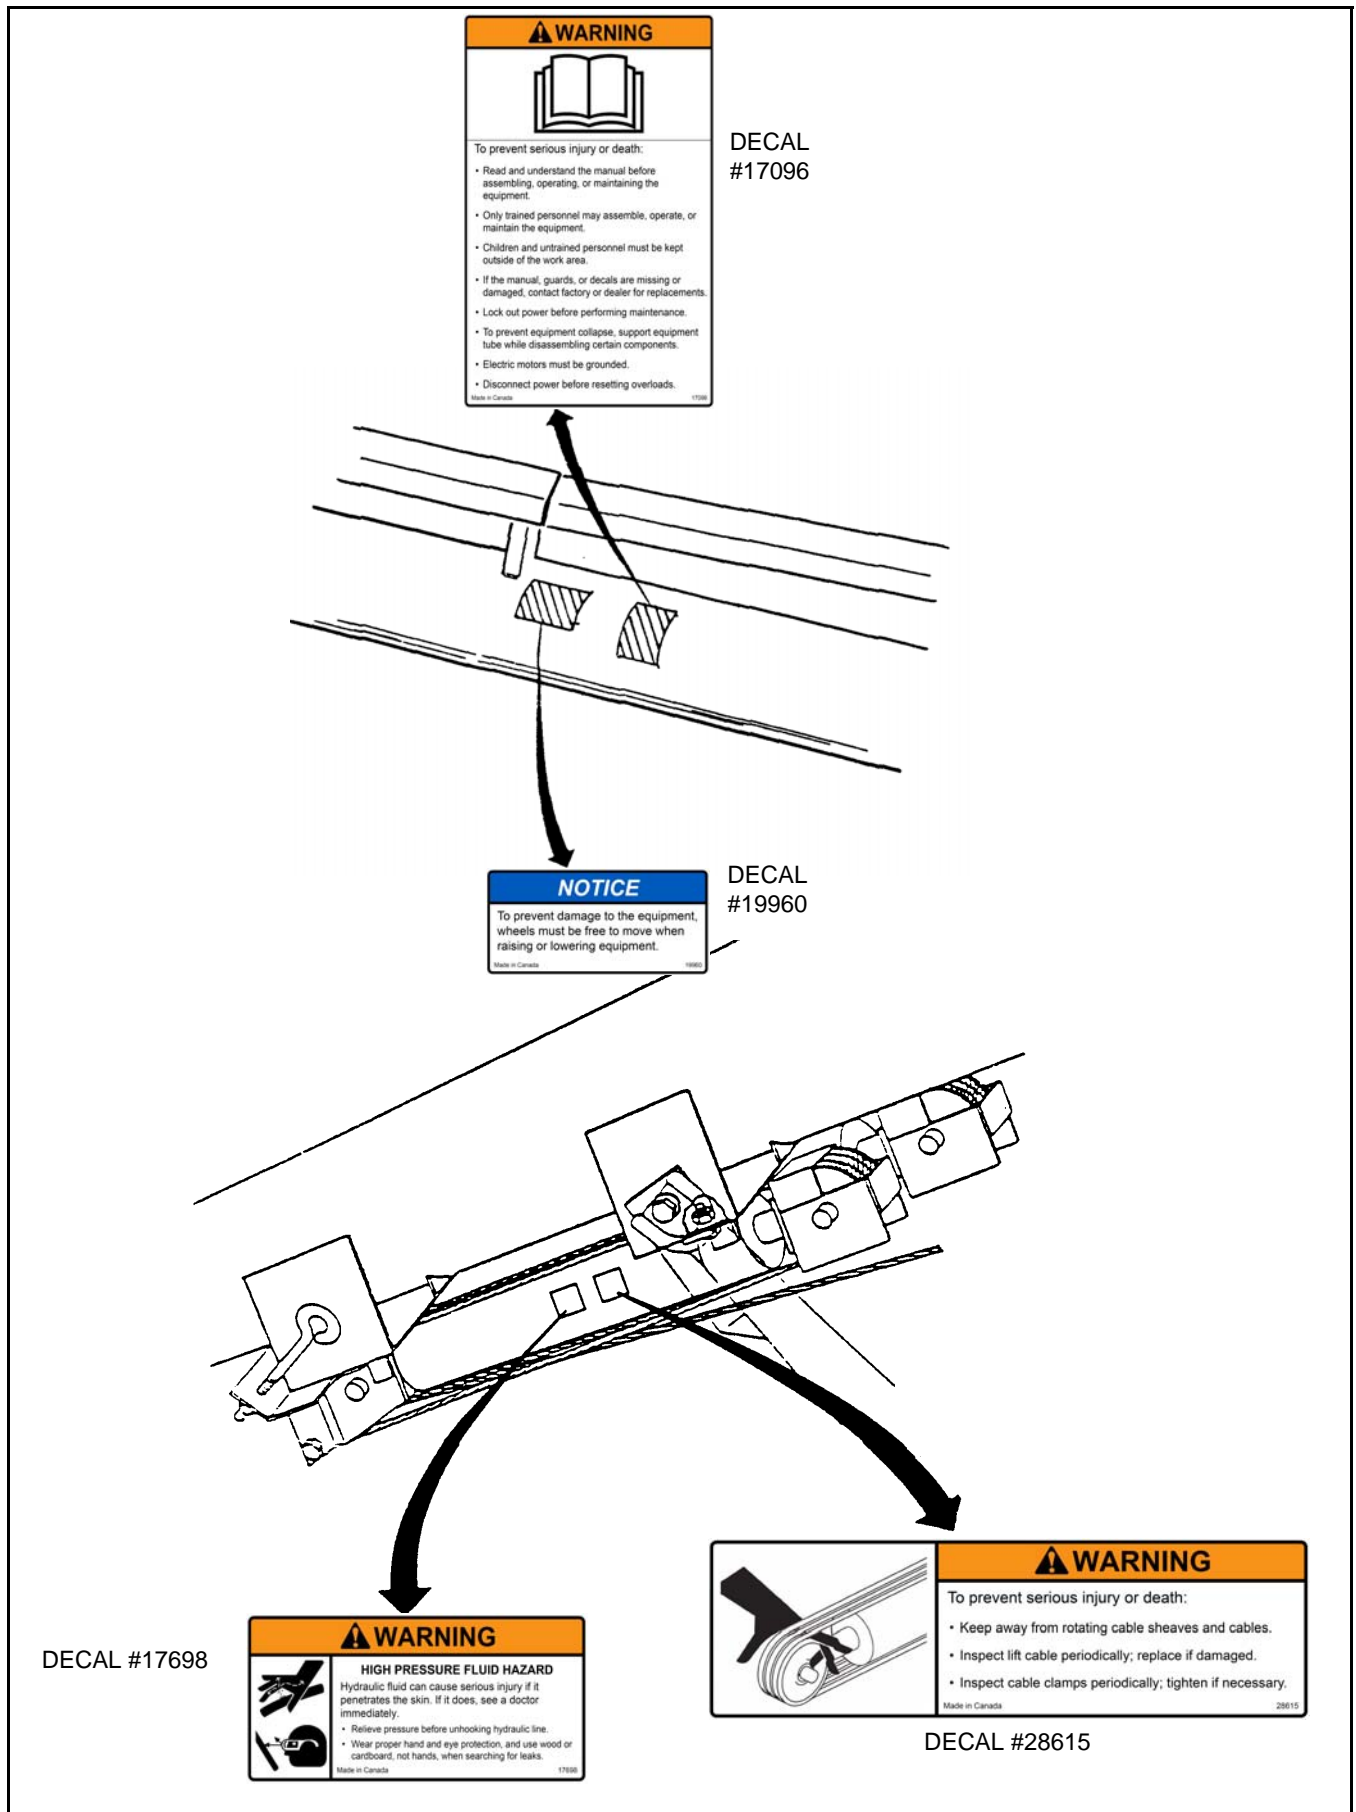


Figure 2.2

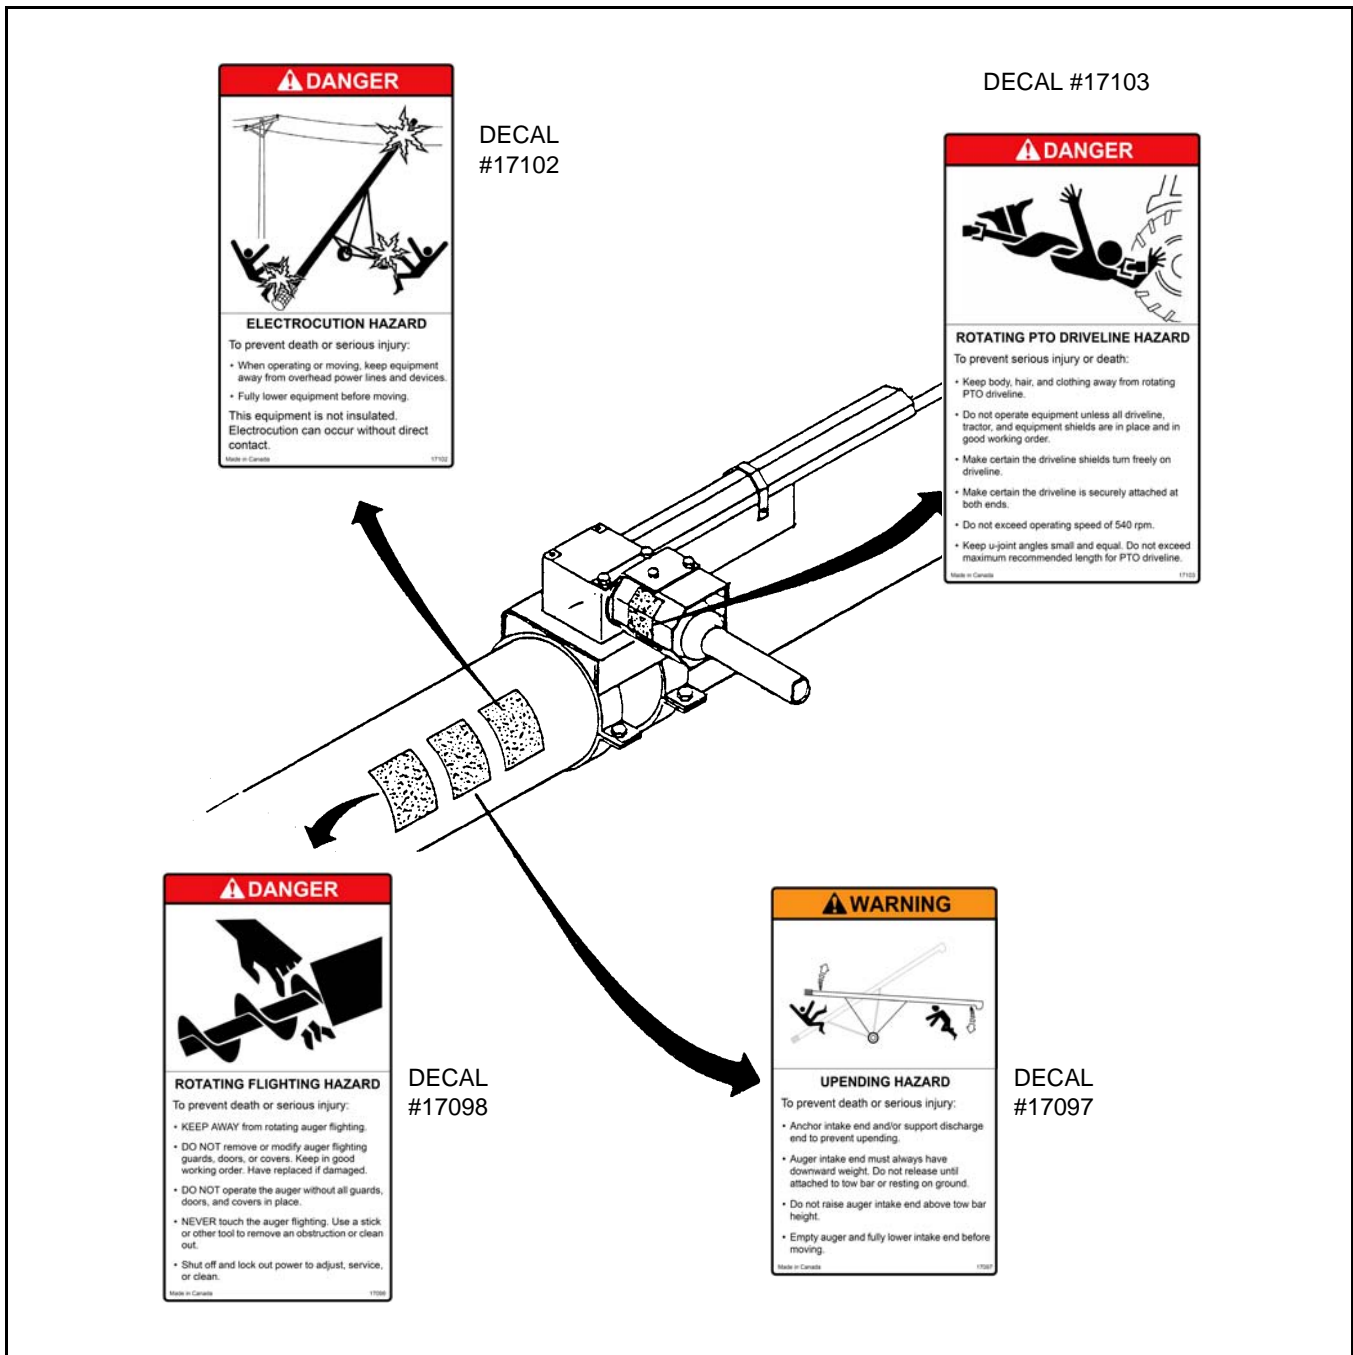


Figure 2.3

4. Transport & Placement

Warning: Before continuing, please reread the safety information relevant to this section at the beginning of this manual. Failure to follow the safety instructions can result in serious injury, death, or property damage.

4.1. TRANSPORT PROCEDURE

Follow all safety precautions when transporting the auger and use a proper towing vehicle.

1. If auger is raised, place in full down position. The roller track shoe should be seated against the upper track stop with slight tension on the lift cable. Refer to “Lowering & Completion” on page 38.
2. Place and secure hitch pin and safety chain. The safety chain should be threaded through handle on the lower tube and wrapped around auger tube before attaching to the towing vehicle.

Important: Use a type of hitch pin (see Figure 4.1) that will not allow auger to separate from towing vehicle.

3. Disconnect PTO driveline from tractor and secure in transport saddle.

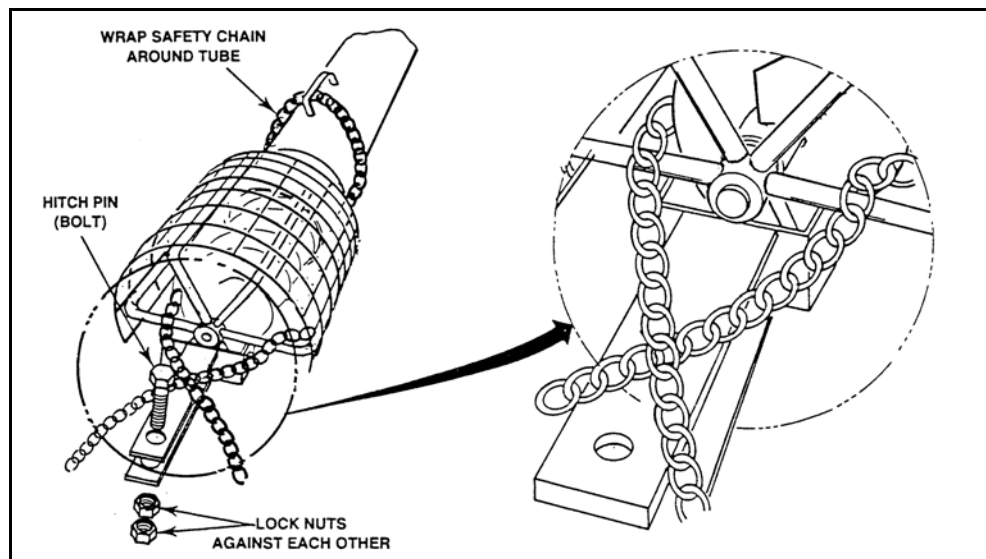



Figure 4.1

4. Beware of overhead obstructions and electrical wires and devices. The PTO-SD augers have minimum clearances of 13'0" to 15'6" (3.96 m to 4.72 m) in normal transport position.

5. Refer to “Transport and Placement Safety” on page 11 for important safety information before towing.

CAUTION	
	If auger wheels are partially or fully buried in snow or grain, failure to clear area around the wheels before moving may cause damage to the auger or result in serious injury.

4.2. PLACEMENT PROCEDURE


1. Ensure towing hitch is in place and secure.

Important: Use a type of hitch pin (Figure 4.1) that will not allow auger to separate from towing vehicle.


2. Before raising or positioning auger, make sure that entire area in line of travel, both on the ground and overhead, is clear on any obstructions or electrical wires.
3. Place auger on reasonably level ground when raising, lowering, or positioning.

Important: Make sure cable is properly seated in the cable sheaves on the lift cylinder and that cable clamps are secure.

Important: Wheels must be free to move when raising or lowering auger.

CAUTION	
	Do not use auger as a hoist to raise any object regardless of weight. This will create an unsafe condition and will void warranty.

Note: The PTO driveline is non-separable. Remove from tractor and secure in transport saddle on auger before moving tractor away from auger.

WARNING	
	Never attempt to increase height of auger by positioning wheels on lumber, blocks, or by any other means. To do so will result in damage to equipment and/or personal injury.

Note: Because of the varied types of tractor hydraulic systems, the quick-connect coupler is to be supplied by the owner. Please consult your tractor manual or your dealer for the proper coupler.

- Before connecting the hydraulic hose, ensure that the quick connect couplers on auger and tractor are clean and free of dirt by wiping with a cloth.

NOTICE

Dirt in the hydraulic system can damage the cylinder o-rings causing leakage and the possible failure of the system.

- After connecting hydraulic hose, visually check it for leaks, binding, flattening, kinks or wear.

Important: *The 130 auger is elevated with two 4 inch single-acting hydraulic cylinders and cables. The following table lists the PSI required to raise specific auger sizes as determined by Westfield testing.*

These tests were conducted using a hydraulic pressure gauge (4000 PSI maximum rating) and are solely intended to be used as a guide. The PSI requirements for a specific auger may vary slightly. Should your auger require a significantly higher PSI to raise, contact either your dealer or Westfield.

Table 4.1

AUGER	PSI	KPa
130-51'	1400	9653
130-61'	1600	11032
130-71'	1800	12411

CAUTION




Do not disconnect hydraulic coupler when system is pressurized.

- Approximate quantity of hydraulic fluid required to raise auger is as follows:

W130-51'	12.4 litres
W130-61'	15 litres
W130-71'	18 litres


7. To raise auger check that the valve on hose to lift cylinders is open, raise the auger to desired height, and close hose valve.

WARNING	
	<p>If hose valve remains open, a loss of hydraulic pressure within the tractor system will allow the auger to lower inadvertently, damaging equipment and/or causing personal injury.</p> <p>Do not disconnect coupler under pressure. Relieve pressure and then disconnect.</p> <p>Fluid leaks in the hydraulic cylinders or hoses will allow auger to lower inadvertently. Repair all leaks and breaks immediately.</p>

8. Move the auger into working position slowly. Do not unhitch and attempt to move auger by hand.
9. Once auger is in position, chock wheels on both sides and apply the park brake on the tractor (or chock its wheels as well) to prevent movement during operation.

Important: *When releasing auger from the towing vehicle, test the intake end for downward weight. Do not raise the intake end above drawbar height. When the intake end is elevated too high with auger in raised position, the balance of weight quickly transfers to the discharge end, causing it to upend. Ensure proper anchoring/support.*

10. When operating auger in the raised position, rest the discharge end lightly on the bin roof, or tie to bin to prevent wind from toppling auger. When operating the auger in a freestanding position, anchor the intake end.
11. Anchor and/or support auger during operation.
 - When lower half of auger empties of grain, the weight balance transfers to upper end of auger, which can cause upending.
12. See "Completion / Clean Up" on page 42 for correct lowering procedure.

CAUTION	
	<p>Do not use auger as a hoist to raise any object regardless of weight. This will create an unsafe condition and will void warranty.</p>

5. Operation

Warning: Before continuing, please reread the safety information relevant to this section at the beginning of this manual. Failure to follow the safety instructions can result in serious injury, death, or property damage.

Operators must observe safety procedures at all times and follow the pre-operational checklist before each start-up.

5.1. PRE-OPERATION CHECKLIST

Before operating auger each time, the operator must confirm the following:

- All fasteners are secure as per assembly instructions.
- PTO driveline is connected and secure.
- PTO driveline shield rotates freely.
- Lift cable is not frayed or damaged.
- Lift cable is properly seated in cable sheaves.
- Cable clamps are secure.
- Tube alignment is reasonably straight.
- Auger wheels are chocked, and if necessary, tractor wheels are chocked or the parking brake has been engaged.
- Intake area and discharge spout are free of obstructions.
- Proper maintenance has been performed.

5.2. AUGER DRIVE & LOCKOUT PROCEDURE


Drive Type	Before Operation	Lockout
PTO Driveline	<p>Before starting, ensure</p> <ul style="list-style-type: none"> • PTO driveline is securely attached to the tractor and gearbox • tractor park brake in engaged and/or wheels are chocked • you are not exceeding the maximum operating length of 92" (2337 mm) of the PTO driveline or maximum angle of 15° • PTO drive on the tractor is in the off position 	<p>Shut off tractor's engine and remove key from tractor.</p> <ul style="list-style-type: none"> • If removing key is impossible, remove PTO driveline from tractor.

5.3. OPERATING PROCEDURE

5.3.1. START-UP AND BREAK IN

1. Complete the checklist at the beginning of this chapter. If everything is satisfactory, prepare for a 30 minute operation at half speed.
2. Correctly position portable grain hopper secure it to the auger with both straps (where applicable).

Important: *Anchoring and/or support auger during operation. When lower half of auger empties of grain, the weight balance transfers to the upper end of auger, which can cause upending.*

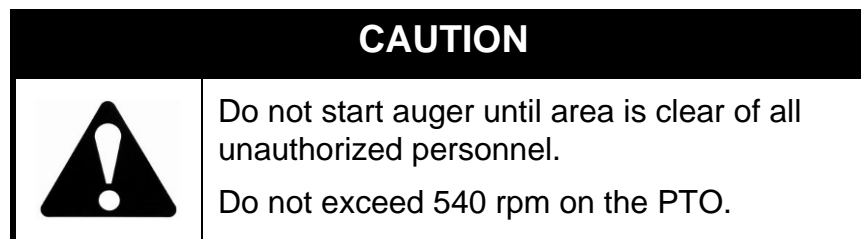

3. Start tractor and engage PTO driveline, then feed grain to auger. If auger functions normally, check at varying speeds for a period of 30 minutes.

Important: *When starting auger for the first time, be prepared for an emergency shutdown in case of excessive vibration or noise. Note that auger may run rough until tube is polished.*

4. Upon completion of initial run, shutdown auger (see section below for more information on shutting down your auger).
5. Lock out tractor and conduct a complete inspection of auger following the checklist at the beginning of this chapter.


After the initial start-up and inspection, the auger should be shut down and inspected at least three times during the first 10 hours of operation.

Keep operation of empty auger to a minimum, as this results in excessive wear.

Once auger is broken in, the checklist should be a part of the daily routine before operating auger.

5.3.2. OPERATING WITH A FULL LOAD

1. When operating the auger, always work with a second person in a position to monitor the operation and initiate a shutdown in case of emergency.
2. Monitor the auger during operation for abnormal noises or vibrations.
3. Shut off all power before making adjustments, servicing, or clearing the machine.

DANGER	
	<p>Rotating Flighting Hazard!</p> <p>To prevent death or serious injury:</p> <ul style="list-style-type: none">• Keep away from rotating auger flighting.• Do not remove or modify auger flighting guards, doors, or covers. Keep in good working order. Have replaced if damaged.• Do not operate the auger without all guards, doors, and covers in place.• Never touch the auger flighting. Use a stick or other tool to remove an obstruction or clean out.• Shut off and lock out power to adjust, service, or clean.

USE OF GRAIN SPREADERS: Many grain spreaders cannot handle the large capacity of some augers. Some augers plug, causing damage to the flighting and other drive components. This type of damage is not covered by warranty. Hints on how to avoid this...

- Get a larger spreader, if available.
- Remove the spreader.
- Make sure spreader is turned on.
- Center auger spout on spreader.
- Do not lower auger spout into spreader.
- Suspend the spreader from bin ceiling leaving extra room for excess grain to flow over the spreader.

BIN LEVEL INDICATORS: These augers are fast and bins fill up quickly. A full bin will cause auger to plug, which can damage the flighting and other drive components. Installing quality grain-level indicators on your bins will allow you to monitor bin filling and help prevent damage to your auger.

5.3.3. SHUTDOWN

NORMAL SHUTDOWN:

1. Near the end of a load, decrease auger speed until all grain is clear of machine.
2. When auger is clear of grain, disengage PTO drive.
3. Shut down and lock out tractor.

EMERGENCY / FULL-TUBE RESTART:

1. If the auger is shut down for an emergency, lock out tractor before correcting the problem.

- If the problem is plugging, clear as much of the grain as possible using a piece of wood, wet/dry vac, or other tool before restarting auger. **Do not reach in and use your hands** even if the tractor has been locked out.
2. If auger tube is full of grain, do not restart at full speed. Engage PTO at low rpm, gradually increasing power until normal operating speed is reached.

NOTICE

Starting the auger when there is grain blockage will result in damage.

5.3.4. LOWERING & COMPLETION

After operation:

1. Clean entire work area.
2. Remove all supports and chocks.
3. Move auger out of working position and lower fully (see shaded box that follows for lowering procedure).
4. Move auger to the next work area or to a storage area and then clean out.

LOWERING

1. Disconnect driveline from tractor before lowering.
2. Ensure area beneath auger is clear.
3. Reconnect hose coupler to tractor, if disconnected.
4. Open hose valve.
5. Open tractor valve, feathering to prevent too rapid a descent.

Important: Once valves are opened, auger lowers by gravity. As the auger nears the full down position, the rate of descent will increase. Do not operate with tractor valve fully open.

Do not leave auger in raised position when not in use. Auger could drop rapidly due to a cable break. High winds may also upset auger.

5. Clean out auger.
 - a. Shut off tractor engine and lock out power.
 - b. Manually clean out grain with a piece of wood, vacuum cleaner, or other tool. Do not use hands.
6. Prepare for transport and placement or storage (see appropriate chapters for more information).

6. Maintenance & Storage

Warning: Before continuing, please reread the safety information relevant to this section at the beginning of this manual. Failure to follow the safety instructions can result in serious injury, death, or property damage.

6.1. GENERAL MAINTENANCE PROCEDURES


Please follow the guidelines below.

Area	Maintenance	Frequency
General	While auger is in use, observe the operation checklist in Operation section.	Daily
General	Check all operating, lifting, and transport components. Replace damaged or worn parts before using auger. For replacement instructions, see Assembly section.	Regularly
Lift Cable	Check and replace if frayed or damaged. Make sure cable clamps are secure.	Periodically
Wheel Hubs	Repack with lithium-based grease.	Every 2–3 years
Tire Pressure	Check with a pressure gauge. Pressure should be maintained according to side wall recommendations.	Monthly, or if it seems low
PTO Driveline	Lubricate both universal joints.	After every 8 hrs of operation
	Lubricate the center portion of the driveline (grease fitting is beneath shield) on a yearly basis.	Yearly
Upper chain drive	Fill enclosed upper drive housing to plug level with grease. 2200 g (78 oz) For continuous use in extreme cold, semi-fluid arctic grease or heavy oil may be used	Regularly
Drive Chain Adjustment	Maintain 1/4" - 1/2" chain deflection. To adjust, loosen bolts on top bearing in the upper drive housing, adjust chain to proper tension, and re-tighten bolts	Regularly
Intake Bushing	Lubricate.	Daily
Gearbox	Maintain oil level at half full (center of cross shaft) Gearbox should be level if checking or refilling, do not overfill	Regularly
Hydraulic Hose	Using cardboard as a backdrop, check hose and coupler for leaks, wear, or damage. Replace if necessary.	Frequently
Cable Sheaves	Oil sheave pins on lift cylinder.	Twice a year
Truss Cables	Adjust to keep auger tube reasonably straight.	As necessary

6.2. GENERAL STORAGE PROCEDURES

TO PROTECT AUGER IN STORAGE DURING THE OFF-SEASON:

1. Lower the auger to full down position with slight tension on the cable.
2. Lubricate all grease fittings according to the maintenance procedure.
3. Inspect auger for damage and note any repairs required. Order replacement parts from your dealer.
4. Check tire pressure and inflate if necessary. See tire sidewall for recommendations.
5. Clean and re-lubricate spline on PTO driveline. Cover PTO driveline with plastic bag to protect it from the weather and place in the transport saddle.
6. Tow auger to storage area. Park and chock wheels.

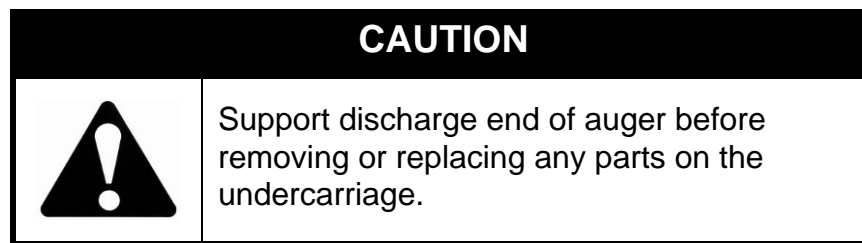

TO PREPARE AUGER FOR USE AFTER STORAGE:

1. Check tire pressure and inflate if necessary. See tire sidewall for recommendations.
2. Tow auger to work site.
3. Remove cover from spline of PTO driveline and re-lubricate.
4. Check oil level in gearbox and refill if necessary (half full only).
5. Replace any damaged parts and decals.
6. Check and perform general maintenance before using auger.
7. Before raising auger after storage, make certain cable is in good condition, replacing it if frayed or damaged. Also make sure cable is properly seated in the cable sheaves on the lift cylinder and that cable clamps are secure.
8. On augers equipped with lubricated upper drive, check level annually and add as needed (fill to plug level).

Note: *Use only genuine Westfield replacement parts or equivalent. Replacement parts such as intake guards, pulley guards, PTO driveline shields, winches and lift cables Must meet ASAE standards or serious injury may result. Use of unauthorized parts will void warranty. If in doubt, contact Westfield or your Westfield dealer. Do not modify any auger components.*

7. Troubleshooting

Problem	Possible Cause	Remedy
<p>Excessive noise or vibration.</p> <p>*Remember to follow proper break-in procedures—auger may run rough until tube is polished. If noise is extreme from outset or continuous after several loads of grade are fed, continue with troubleshooting below</p>	Chatter from wooden bearings.	Spray penetrating lubricant between shaft and bearing surface. Bearings will break in over time. *If replacement of a bearing becomes necessary, split bearings are available to avoid having to slide all bearings off driveshaft.
	Truss cables incorrectly adjusted.	Support end of auger and adjust cables so auger is flat or curves slightly upwards.
	Flighting peeled back due to plugging.	Inspect spout end of auger for flight condition. Remove and replace flight sections as necessary.
	Top drive inadequately lubricated.	Fill to appropriate level with grease. Top drive is not designed to be filled with oil.
	Bent flighting sections.	Support auger and remove all flight sections. Check for straightness of flight stubs by rolling across flat concrete section. Straighten stub or replace as necessary. Take care not to bend flighting when reinstalling.
	Obstruction in tube.	Visually inspect for cloth or trash wrapped around flighting, or buildup of gum from oily crops such as flax or canola.
<p>Shear bolts fail repeatedly.</p>	Incorrect shear bolt type.	Replace with correct part number. Westfield shear bolts are specifically designed to provide correct driveline protection.
	Shear bolt hole worn out-of-round.	Frequent use of the incorrect shear bolt size can wear the mounting hole creating a “scissor effect,” which will require replacement of the affected parts.
	Corn spreaders in bin unable to keep up with auger output.	Slow down auger or remove corn spreaders.
	Flighting peeled back as a result of plugging.	Occurs when bin has overfilled, or corn spreaders restrict end of discharge. Inspect flighting at discharge end of auger. If necessary, replace flighting.
	Driveline failure (bearing, gearbox, etc.).	See maintenance section.

Problem	Possible Cause	Remedy
Premature wear on auger tubes.	Auger being run at low capacity or empty for extended period of time.	Frequently occurs on farms using grain wagons. Auger should not be left unattended when filling bins. Depending on application, a belt conveyor may be more appropriate.
	Bent flighting.	
	Flighting allowed to wear beyond normal point of replacement.	When flighting becomes razor-thin at intake, replacement is critical. Since flight material is double thickness at welded lap joints, high spots on flight occur and can accelerate spot tube wear.
Hydraulic lift settles out over time.	Shut off ball valve open.	Oil is leaking through tractor valve. Auger ball valve should be closed whenever set up at bin.
	Shut off ball valve leaking.	Disconnect hose from tractor and check for leakage.
	Lift cylinder cup seal leaking.	Observe if oil leaks from cylinder rod wiper seal (may not be visible on dual action cylinders). Remove and replace cup seal.

WARRANTY

Westfield Industries Ltd. warrants products of its manufacture against defects in materials or workmanship under normal and reasonable use for a period of one year after date of delivery to the original purchaser.

Our obligation under this warranty is limited to repairing, replacing, or refunding defective part or parts which shall be returned to a distributor or a dealer of our Company, or to our factory, with transportation charges prepaid. This warranty does not obligate Westfield Industries Ltd. to bear the cost of labor in replacing defective parts. Any defects must be reported to the Company before the end of the one year period.

This warranty shall not apply to equipment which has been altered, improperly assembled, improperly maintained, or improperly repaired so as to adversely affect its performance. Westfield Industries Ltd. makes no express warranty of any character with respect to parts not of its manufacture.

The foregoing is in lieu of all other warranties, expressed or implied, including any warranties that extend beyond the description of the product, and the IMPLIED WARRANTY of MERCHANTABILITY is expressly excluded.

WESTFIELD INDUSTRIES LTD.

ROSENORT, MANITOBA

CANADA

ROG 1W0

WESTFIELD

Westfield is a Division of Ag Growth Industries LP

Part of the Ag Growth International Inc. Group

P.O. Box 39

Rosenort, Manitoba, Canada R0G 1W0

Phone: (866) 467-7207 (Canada & USA)

Fax: (866) 768-4852

website: www.grainaugers.com

email: sales@grainaugers.com

© Ag Growth Industries Limited Partnership 2009

Printed in Canada